We are the manufacturer of safety shoes. It's our honor to introduce DESIGN

### CREATIVITY SOLE



- New Technical PU Injection Sole.
- We Can Make The Sole Appearance Same As MD (Moulded) Sole, But We Are Injection, They I Are Cemented.
- The Connected Border Is More Tidy And Clean.
- The Shoe Of Cemented MD Sole Degum Easily.
- Put On Our Shoe From Now On To Say "BYE BYE" to degumming shoe.



#### **Product Description**

000 00 00 00 00 00 000 dewalt 00 00
0132

00 00 :	00 : 000 000 00 000 : PV 00000 000
	1. 00 000 00, 00 00 200 0000.
	2. 00 00000.
000:	1, 1100 2
00:	1.4 / pr
00:	000 PU 00 00
<u></u> :	
□:	OO OO O OO OOO OOO (OO OOOO OOOOO)
<u> </u>	00 0 HI-POLY 00 PU (000 0000 00 000 000 000)
00:	PU [[[
00:	6 🖂
	38-46 (4-12)
<u></u>	CE EN ISO 20345 S1P SRC
00:	6 🖂
000:	
00 00	59x53x33 🔲 🗓
00000 00 00 :	2600   / 1x20 '

### Product Pictures






Company Information





# **Production Process**

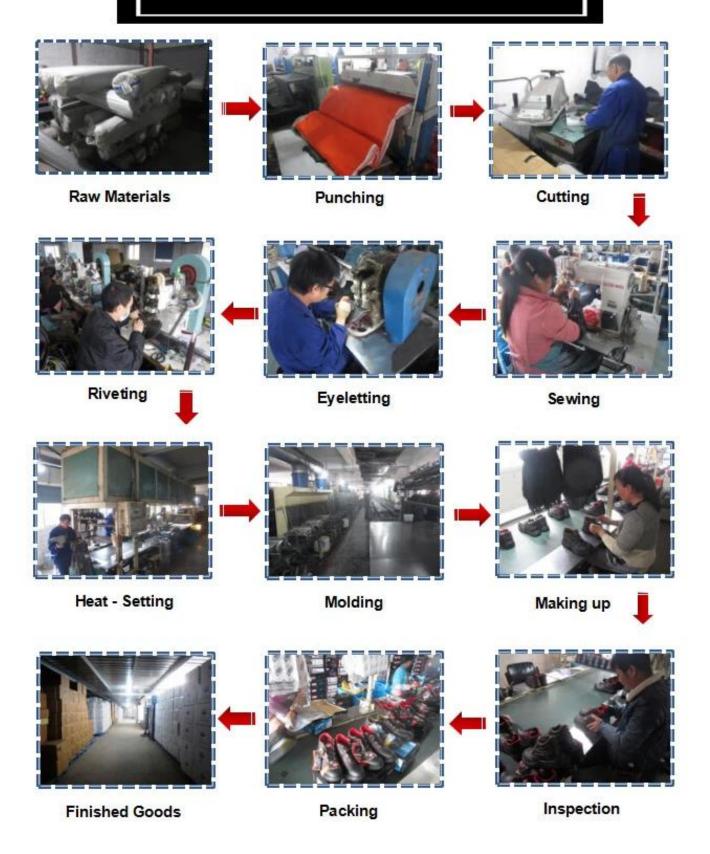

# Canton Fair





### SAFETY SHOES



### **RAIN BOOTS**





PROFESSIONAL SAFETY SHOE & RAIN BOOT FACTORY